


Technical Bulletin

Lube technique for Multiple Load Handler Upper Bearings

This Technical Bulletin describes the technique to properly lube the upper hooks on a Cascade Multiple Load Handler. These steps are also described in the attachment Installation Instructions and Service Manual.

- 1 Sideshift the attachment completely to one side. Remove dirt and old grease from the side of the upper mounting hooks. Sideshift completely to the other side and remove debris.
- 2 Sideshift to center the attachment. This positions the grease fittings directly above the upper bearings.
- 3 Apply chassis grease to the upper hook grease fittings.
- 4 Sideshift the attachment each direction to distribute the grease. Remove excess new grease on the side of the hooks to prevent dirt buildup.

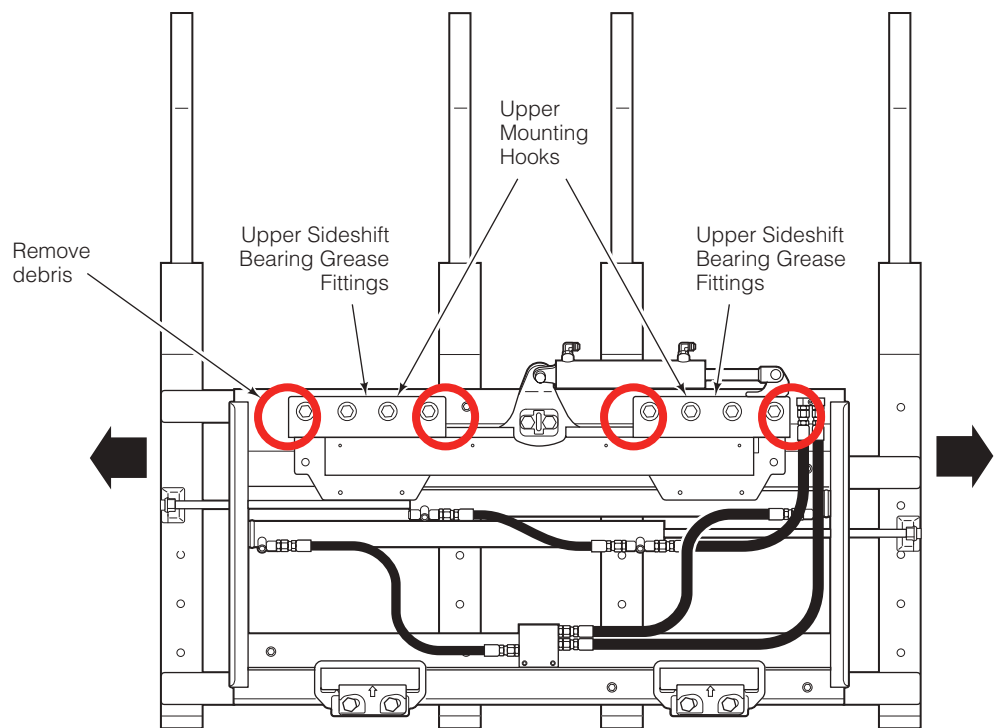

SD1406.eps

NOTE: This information should not be interpreted as the basis for warranty claims unless so designated.

cascade[®]
corporation

For Technical Support . . .

Call: 1-877-CASCADE (227-2233)

OR

Write: Cascade Corporation, PO Box 1508, Guelph, Ontario, Canada N1H-6N9